



Replacement of Driver blade. Essve Gas tools.

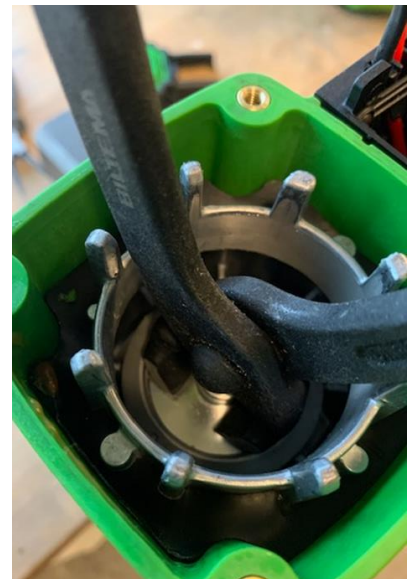

(Pge 1:3)

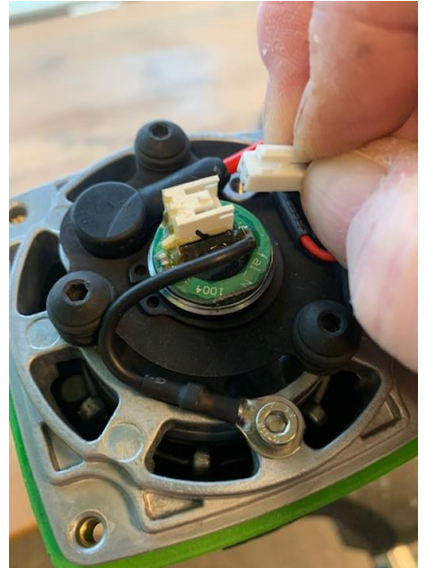

Replacement of Driver blade. Essve Gas tools.



(Pge 2:3)



Remove the piston ring, and mount on the new driver blade.

Reassemble the tool in reverse order.



Replacement of Driver blade. Essve Gas tools.



(Pge 3:3)

